


OPERATING AND INSTALLATION INSTRUCTIONS

AL-48-S/ AL-48-D

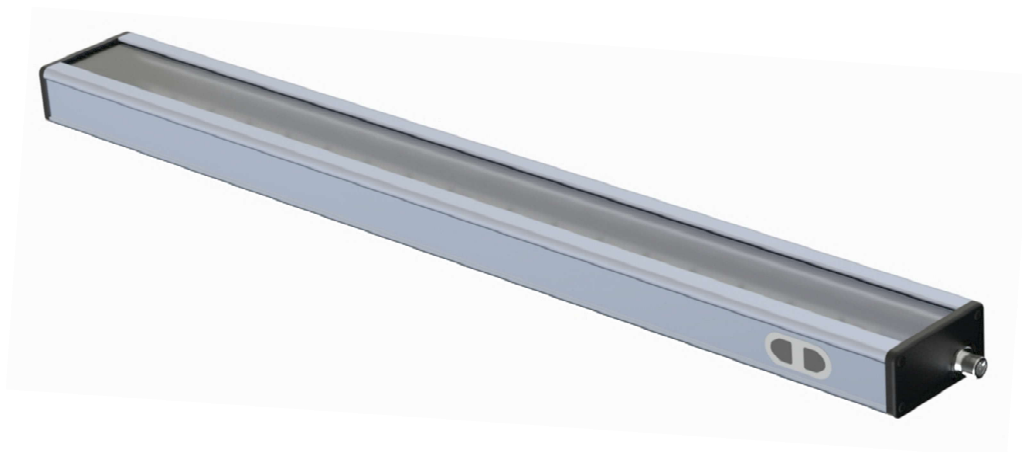

CE / cUL[®]US

Keep for future reference!

Schrempp electronic GmbH
Wiesenstrasse 5
D-65843 Sulzbach/Ts.

Phone +49 6196 802399-0
Fax +49 6196 802399-9
E-mail main@schrempp-electronic.de
Internet www.schrempp-electronic.de

LED workstation lamp: AL-48-S: 10823 / GTIN 4262388141478
AL-48-D: 10824 / GTIN 4262388141485

Serial number: See type plate

Year of manufacture: See type plate

Version of
operating and installation
manual: 01

Date of issue of the
Operating and installation
instructions : 28.11.2025

Product changes

Year	Type	Changes
2025	see above	UL approval

Revisions to the document

Date	Version	Changes
28.11.2025	01	Intended use, additions to safety instructions

Approvals

This document requires the following approvals:

Name	Title
Wolfram Schrempp	Management

© 2025 by Schrempp electronic GmbH

This operating and installation manual and all illustrations contained therein are protected by copyright. Any use outside the limits of copyright law is prohibited without the prior written consent of the publisher and is punishable by law. This applies in particular to reproductions, translations, microfilming, storage, and processing in electronic systems. Please contact the publisher for permission requests.

Contents

Contents	3
List of illustrations	6
1 Introduction	7
1.1 Means of presentation	8
1.1.1 Section-specific warnings	8
1.1.2 Embedded warnings	9
1.1.3 Other means of presentation	9
1.1.4 Symbols used in the operating and installation instructions	9
1.2 Warranty and liability	11
1.3 Copyright protection	12
1.4 Warranty provisions	13
1.5 Service/customer service	13
2 Safety	14
2.1 Intended use	14
2.1.1 Note on installing the LED workstation light	16
2.1.2 Structural modifications to the LED workstation lamp	16
2.1.3 Foreseeable misuse	17
2.2 Requirements for personnel	17
2.2.1 Personnel to be trained	17
2.2.2 Trained personnel	18
2.2.3 Qualified personnel	18
2.2.4 Electrical specialist	18
2.2.5 Responsibilities	18
2.2.6 Obligations of personnel	18
2.2.7 Unauthorized persons	19
2.3 Basic safety instructions	19
2.4 Safety measures for environmental protection	19
2.5 Special hazard warnings/residual hazards	20
2.5.1 Symbols used on the LED workstation lamp	20
2.5.2 Hazards due to electrical energy	21
2.5.3 Warning about incorrect power supply	22
2.5.4 Warning about unsuitable power supply	22
2.5.5 Warning of inadequate protection class	22
2.5.6 Danger due to insufficient insulation requirements	23
2.5.7 Danger due to incorrect area of application	23
2.5.8 Warning about incorrect safety assumptions	23
2.5.9 Warning about falling parts during installation	24
2.5.10 Caution regarding thermal hazards	24
2.5.11 Caution regarding optical radiation	25
2.5.12 Dangers due to tripping	25
2.5.13 Dangers due to use of incorrect spare parts	25
2.5.14 Hazards due to insufficient qualifications	25
2.5.15 Hazards due to cleaning fluids	26

2.5.16	Reference to environmental influences	26
2.5.17	Reference to ESD hazard.....	26
2.5.18	Reference to EMC hazards.....	26
2.5.19	Reference to mechanical stress	27
2.5.20	Reference to chemical effects and cleaning	27
2.5.21	Reference to installation errors	27
2.6	Personal protective equipment.....	28
2.7	Emergency instructions.....	29
2.8	Operator's obligations	29
3	Description of the LED workstation lamp	30
3.1	Functional description	30
3.1.1	General	30
3.1.2	Optical properties.....	30
3.1.3	Electrical connection	30
3.1.4	Safety features.....	30
3.1.5	Typical areas of application	31
3.2	Technical data	31
3.2.1	Dimensions	33
4	Transport and storage	34
4.1	Delivery by an authorized transport company.....	34
4.2	Inspection upon receipt by the recipient.....	34
4.3	Packaging.....	34
4.3.1	Unpacking	34
4.3.2	Repackaging	35
4.4	Information on hazards during transport	35
4.5	Scope of delivery LED workstation lamp.....	35
4.6	Temporary storage	35
5	Assembly.....	36
5.1	Pre-assembly by Schrempp electronic GmbH	36
5.2	Information on hazards during assembly	36
5.3	Preparatory measures.....	38
5.3.1	General	38
5.3.2	Preparatory measures for electrical work	38
5.4	Installing LED workstation lights	39
5.4.1	Mechanical fastening	40
5.4.2	Electrical connection	40
5.4.3	Installation instructions.....	40
6	Commissioning.....	41
6.1	Safety measures before commissioning	41
6.2	Connection AL-48-S/ AL-48-D	41
6.3	Integrated dimming (AL-48-D only)	42
7	Troubleshooting	42
7.1	Remedial measures	42
8	Maintenance and cleaning.....	43
8.1	Safety measures during maintenance work	43
8.1.1	General safety measures during maintenance work	43

8.2	Inspection and maintenance work	44
8.2.1	Maintenance intervals.....	44
8.2.2	Preparatory measures Electrical system	44
8.2.3	Maintenance - monthly	45
8.2.4	Maintenance – annually.....	45
8.2.5	Replacement of components.....	46
9	Decommissioning and dismantling.....	46
9.1	Disposal	47
10	Appendix	47
10.1	EU Declaration of Conformity	47

List of illustrations

Figure 1: Dimensions 33

1 Introduction

These operating and installation instructions provide you with all the information you need for the smooth operation of the LED workstation lamp .

The operating and installation manual must be read, understood, and applied by all persons involved in the assembly/installation, transport, commissioning, operation, maintenance, cleaning, troubleshooting, decommissioning, dismantling, and disposal of the LED workstation light . This applies in particular to the safety instructions listed.

After reading the operating and assembly instructions , you will be able to:

- transport the LED workstation light safely,
- install/assemble the LED workstation light safely,
- put the LED workstation light into operation in a safe manner,
- operate the LED workstation light safely,
- take the appropriate measures in the event of a malfunction,
- maintain the LED workstation light in accordance with regulations,
- clean the LED workstation lamp in accordance with the regulations,
- decommission the LED workstation light in a safe manner,
- Dismantle the LED workstation light in accordance with safety regulations.
- Dispose of the LED workstation light in accordance with regulations.

In addition to the , generally applicable, statutory, and other binding regulations on accident prevention and environmental protection in the country of use must be observed.



1.1 Display media

As a note and direct warning of hazards, text statements in this operating and installation manual that require special attention are marked as follows:




1.1.1 Section-related warnings

Section-related warnings apply not only to a specific action, but to all actions within a section.

Structure

 SIGNAL WORD	
 Symbol for further explanation of the hazard	Type and source of the hazard! Possible consequence(s) of non-compliance! ► Measures to avoid the hazard.

Hazard levels

 DANGER	High-risk hazard which, if not avoided, will result in death or serious injury.
 WARNING	Medium-risk hazard which, if not avoided, could result in death or serious injury.
 CAUTION	Low-risk hazard which, if not avoided, may result in minor or moderate bodily injury.
NOTE	Low-risk hazard which, if not avoided, may result in property damage.

1.1.2 Embedded warnings

Embedded warnings apply to specific actions and are integrated directly into the action.

Structure

⚠ SIGNAL WORD Type and source of the hazard

Possible consequences of non-compliance

► Measures to avoid the hazard

Hazard levels

- **⚠ DANGER/WARNING/CAUTION**
- **NOTE** (without warning triangle)





1.1.3 Other means of representation











i | The info symbol provides useful information.









- Texts following this symbol are lists.
- Text following this symbol describes measures in warning notices and steps to be taken.
- a) Text following this symbol describes activities that must be performed in the specified order.
- " " Text in quotation marks refers to other chapters or sections.

1.1.4 Symbols used in the operating and assembly instructions

Warning notices additionally indicate specific hazards as follows:

Symbol	Description
Warning sign	
	Warning of hand injuries This symbol warns of hand injuries.
	Warning of obstacles on the floor This symbol warns of tripping hazards caused by obstacles on the floor.
	Warning of suspended loads This symbol warns of hazards when standing under suspended loads.
	Warning of electrical voltage This symbol warns of hazards posed by electrical voltage.

Symbol	Description
	Warning of electrostatic-sensitive components This symbol warns of components that can be damaged by electrostatic discharge (ESD).
	Warning of hot surfaces This symbol warns of the risk of burns from hot surfaces.
Mandatory sign	
	Observe the operating and installation instructions This symbol indicates that the operating and installation instructions must be observed.
	Wear safety shoes This symbol indicates that safety shoes must be worn in the area of application.
	Use hand protection This symbol indicates that hand protection must be worn in the area of application.
	Wear protective clothing This symbol indicates that protective work clothing must be worn in the area of application.
	Use head protection This symbol indicates that head protection must be worn in the area of application.
Hazardous substance symbols	
	Warning of environmentally hazardous substances This symbol warns of environmentally hazardous substances.
	Danger - Caution/Systemic health hazard This symbol warns of systemic health hazards if inhaled or swallowed.
	Danger - Caution toxic (harmful to health)/Corrosive or irritant effect/Lower systemic health hazard This symbol warns of substances that are harmful to health.

Symbol	Description
Other symbols	
	Disposal instructions This symbol indicates that the labeled product must not be disposed of with household waste.
	Recycling This symbol indicates that various materials can be returned to the recycling cycle.
	Qualified electrician required This symbol indicates tasks that may only be performed by a qualified electrician.
	Mechanical specialist required This symbol indicates activities that may only be performed by a qualified mechanic.
	CE marking CE marking: Product complies with essential EU requirements.
	Limited surface temperature DIN EN 60598-2-24:2014-04 For luminaires with this marking, the temperature of all surfaces of the luminaire that are exposed to dust deposits must not exceed 90°C.
	UL approval (versions with M12 connector) Product complies with essential UL requirements as a component used in a finished product.
	Electrical safety class which ensures protection through ** safety extra-low voltage** (SELV), whereby the supply voltage is a maximum of 50 V AC or 120 V DC.

1.2 Warranty and liability

The obligations agreed in the delivery contract, the general terms and conditions, the delivery conditions of LED workstation lamp, and the legal regulations valid at the time of conclusion of the contract apply.

All information and instructions in these operating and installation instructions have been compiled taking into account the applicable standards and regulations, the state of the art, and our many years of knowledge and experience.

This operating and installation manual is not intended to replace the suitability or reliability of the LED workstation light for specific user applications and must not be used to determine its suitability or reliability.

The LED workstation lamp may only be used for the applications described by the manufacturer. All other applications are improper and considered dangerous. The manufacturer cannot be held liable for damage caused by errors, unintentional or improper use of the LED workstation lamp .

Warranty and liability claims for personal injury and property damage are excluded if they are attributable to one or more of the following causes:

- Improper or inappropriate use of the LED workstation lamp ,
- improper transport, assembly/installation, commissioning, operation, troubleshooting, maintenance/cleaning, decommissioning, disassembly, and disposal of the LED workstation light,
- operation of the LED workstation lamp with a defective or opened housing,
- Failure to observe the operating and assembly instructions and the information in the operating and assembly instructions regarding assembly, commissioning, operation, maintenance, and cleaning of the LED workstation lamp ,
- Use of unqualified or untrained personnel,
- structural modifications to the LED workstation light (Modifications or other changes to the LED workstation light may not be made without the prior written consent of Schrempp electronic GmbH . In the event of non-compliance, the LED workstation light will lose its suitability).
- Improperly performed repairs,
- use of unauthorized spare parts or use of spare parts that do not meet the specified technical requirements,
- disasters, foreign object impact, and force majeure.

Furthermore, Schrempp electronic GmbH reserves the right to revise this publication at any time due to technical changes in the context of improving the usage properties and further development, without being obliged to inform other persons of the revision.

1.3 Copyright

These operating and installation instructions, including all illustrations, are protected by copyright and are intended exclusively for internal use.

Any transfer to third parties, duplication, translation, reproduction, electronic or photographic archiving, modification, or other use or communication of the content is prohibited without the prior written consent of Schrempp electronic GmbH. Violations will result in liability for damages; further claims remain reserved.

We reserve the right to make any changes that serve technical progress.

1.4 Warranty provisions

The warranty provisions are contained in the General Terms and Conditions of Schrempp electronic GmbH .

1.5 Service/Customer service



Our customer service team is available to provide technical information:

Phone: +49 6196 802399-0

In addition, our employees are always interested in new information and experiences resulting from the use of our products that may be valuable for improving them.

2 Safety

WARNING



Failure to observe the following safety instructions can have serious consequences:

Endangerment of persons due to electrical, mechanical, or chemical influences, failure of important functions, and damage to the environment!

- ▶ Read the safety and hazard warnings listed in this section thoroughly before putting the LED workstation light into operation.
- ▶ In addition to the instructions in this operating and installation manual, please also observe the generally applicable safety and accident prevention regulations.
- ▶ In addition to the information in these operating and installation instructions, observe the applicable national work, operating, and safety regulations. Also comply with any applicable internal factory regulations.

2.1 Intended use

The operational safety of the LED workplace light is only guaranteed if it is used for its intended purpose.

. Installation may only be carried out by trained control and automation technology specialists who are familiar with the applicable national, regional, and local safety and accident prevention regulations.

The LED workplace light may only be used within the scope of its technical data. Intended use also includes compliance with the specifications in the technical data, compliance with the operating and installation instructions, compliance with the maintenance and servicing regulations, and compliance with the applicable national safety, occupational safety, and accident prevention regulations. Any use beyond this is considered improper.

The specified maximum technological data must not be exceeded. The devices are suitable for indoor use within the scope of the specified protection class and are only intended for stationary installation. The LED workplace lights are not intended for installation in aircraft or spacecraft or for any use other than that specified here and are considered improper use. In particular, it is prohibited to:

- using defective or unsuitable accessories,
- operate the LED workstation light in potentially explosive atmospheres,
- operate the LED workstation lamp if it is not ready for operation or has been modified,
- Place objects on the LED workstation light . Remove all objects from the LED workstation light .
- operate the LED workstation light if the housing is damaged,

- the equipment of the is exposed to rain or wet conditions. Water entering the equipment of the LED workstation light increases the risk of electric shock and failure of the signaling device.
- For lights, the temperature must not exceed 90°C on any surface of the light that is exposed to dust accumulation.
- Open the LED workstation light for maintenance work.
- operate the LED workstation light if the safety and warning notices have been removed or are illegible,
- operate the LED workstation light if it has been installed incorrectly. Incorrect installation of the mechanical or electrical connection can result in personal injury and property damage.
- operate the LED workstation light if cables are damaged. Damage to cables can result in personal injury and property damage.
- operating the LED workstation light if the vibration and temperature ranges are not observed. Failure to observe the vibration and temperature ranges can lead to personal injury and property damage.
- Failure to store and transport the LED workstation light in accordance with the manufacturer's specifications. Incorrect storage and transport can lead to personal injury and property damage.

Proper use also includes:

- Observing all instructions in the operating and installation manual,
- Compliance with the inspection intervals in accordance with the applicable machine directives, if available
- the use of operating materials and consumables in accordance with applicable safety regulations,
- Compliance with national, regional, and local safety and accident prevention regulations
- Compliance with operating conditions,

The technical specifications stated in the technical data must be observed without exception.



- ▶ Only use the LED workplace light for its intended purpose; otherwise, safe operation cannot be guaranteed.
- ▶ Observe the information on the type plate.

The manufacturer is not liable for any personal injury or property damage resulting from improper use; the operator of the LED workstation light is responsible!

2.1.1 Note on installing the LED workstation lamp

Installation may only be carried out by trained control and automation technology specialists who are familiar with the applicable national, regional, and local safety and accident prevention regulations.

The LED workstation light is intended for installation in a machine, system, or device; the control system is therefore specified by the machine, system, or device or installed in it.

The LED workstation light may only be put into operation once it has been established that the machine, system, or device in which the LED workstation light is to be installed complies with all safety requirements of the Machinery Directive 2006/42/EC and other applicable directives and standards.

It is the duty of the manufacturer or distributor to carry out an appropriate and complete risk assessment, evaluation, and testing of the with regard to the specific application or use.

In emergencies, it is recommended to observe and apply the procedures described in the operating and maintenance instructions for the machine, system, or device on which the LED workstation light is installed.

- ▶ During maintenance work, secure the LED workstation light against unexpected restarting on the machine, system, or device in which the LED workstation light is installed.

2.1.2 Structural modifications to the LED workstation light

The design and manufacturer's approval are based on the General Product Safety Regulation. Without prior written approval from Schrempp electronic GmbH, no modifications, additions, or conversions may be made to the LED workstation light.

Failure to comply will render the LED workstation lamp unsuitable for use. The manufacturer of the LED workstation lamp is hereby released from any warranty obligations.

Replace devices that are not in perfect condition immediately.

Only use original spare parts/wear parts/accessories. These parts are specially designed for the LED workstation lamp. There is no guarantee that parts sourced from third parties are designed and manufactured to meet stress and safety requirements.

Parts and special equipment not supplied by Schrempp electronic GmbH are not approved for use with the LED workstation lamp.

2.1.3 Foreseeable misuse

Any use of the LED workstation lamp that exceeds its intended use and/or is otherwise different may result in serious injury.

- ▶ Only use the LED workstation lamp for its intended purpose.
- ▶ Only use the LED workstation lamp if it has been properly maintained and inspected.
- ▶ Do not use the LED workstation lamp outside the environmental conditions (temperature, humidity, protection class) specified in the Technical Data section.
- ▶ For luminaires with this "D" marking, the temperature of all surfaces of the luminaire that are exposed to dust deposits must not exceed 90°C.
- ▶ Do not operate the LED workstation lamp without proper, secure fastening or with loose fasteners.
- ▶ Do not connect the LED workstation light to a power supply that does not meet the specifications. When using in North America (USA/Canada), only use a 24V / Class 2 power supply.
- ▶ Do not operate the LED workstation light in potentially explosive areas unless it has the appropriate ATEX approval.
- ▶ Do not look directly into the illuminated LED surface from a short distance.
- ▶ Do not change or manipulate the factory settings if this would alter the defined signal meaning.
- ▶ Do not carry out any unauthorized repairs, modifications, or alterations to the LED workstation light .

2.2 Requirements for personnel

The LED workstation light may only be transported, assembled, installed, commissioned, maintained, cleaned, repaired, decommissioned, tested, dismantled, or disposed of by persons who are qualified and/or instructed to do so. If the personnel in question do not already have the necessary knowledge and skills, appropriate training and instruction must be provided. All local regulations must be followed.

These persons must be familiar with the operating and installation instructions and act accordingly. The respective responsibilities of the personnel must be clearly defined.

Persons with limited physical, sensory, or mental abilities, or who lack experience and knowledge, must be supervised or instructed in the safe use of the LED workplace light and understand the associated hazards.

The operating and installation instructions specify the following qualifications for different areas of activity:

2.2.1 Trainee personnel

Trainee personnel such as apprentices or temporary workers are not aware of all the hazards that may arise when operating the LED workplace light . They may only carry out work on the LED workplace light under the supervision of qualified or trained personnel.

2.2.2 Trained personnel

Trained personnel have been instructed by the operator or by qualified personnel on the tasks assigned to them and the possible dangers of improper behavior.

2.2.3 Qualified personnel

Qualified personnel are able to carry out the work assigned to them and to independently recognize and avoid potential hazards due to their professional training, knowledge, and experience, as well as their knowledge of the relevant regulations.

2.2.4 Qualified electrician

A qualified electrician is able to carry out work on electrical equipment and independently recognize and avoid potential hazards due to their professional training, knowledge, and experience, as well as their knowledge of the relevant standards and regulations.

The qualified electrician is trained for the specific location in which they work and is familiar with the relevant standards and regulations.

2.2.5 Responsibilities

Improper handling can result in significant personal injury and property damage.

- Only persons who can be expected to perform their work reliably are permitted to work on the equipment. No persons whose responsiveness is impaired by drugs, alcohol, medication, or similar substances may install and connect the LED workplace light .
 - All persons who carry out work on the LED workplace light must read the operating and installation instructions and confirm that they have understood them by signing them.
 - Trainee personnel may initially only carry out work on the LED workplace light under the supervision of qualified personnel. Completion and successful training must be confirmed in writing.
- Observe the personnel requirements for the various life phases/operating modes.

Personnel requirement	Life cycle/operating mode
Qualified specialist personnel, qualified electrician	Transport, installation, commissioning, malfunction, maintenance, decommissioning, dismantling, disposal

The operator is responsible for training the personnel.

2.2.6 Obligations of personnel

All persons assigned to the assembly and commissioning of the LED workplace lamp undertake to do the following before starting work:

- To observe the basic regulations on occupational safety and accident prevention,

- Read the safety instructions and warnings in this operating and installation manual and confirm that you have understood them by signing.

2.2.7 Unauthorized persons

Unauthorized persons who do not meet the qualification requirements for personnel are not familiar with the hazards in the area of application.

- ▶ Keep unauthorized persons away from the operating area.
- ▶ If in doubt, speak to persons and instruct them to leave the operating area.
- ▶ Interrupt work as long as unauthorized persons are in the operating area.

2.3 Basic safety instructions










- ▶ The LED workplace light may only be put into operation and maintained after reading these operating and installation instructions.
- ▶ Use the LED workstation light only for its intended purpose.
- ▶ When operating the LED workstation light , refrain from any work practices that could compromise the safety of persons or the LED workstation light .
- ▶ Always keep the area of use of the LED workstation lamp clean and tidy.
- ▶ Only operate the LED workstation light within the limits of its technical performance data.
- ▶ Keep all safety and hazard warnings on the LED workstation light in a legible condition and replace them if necessary.
- ▶ Work on the LED workstation lamp may only be carried out by qualified or trained personnel.
- ▶ In the event of malfunctions, immediately take the LED workstation lamp out of service.
- ▶ It must be ensured that all persons performing work on the LED workstation lamp have access to the operating and installation instructions at all times.

2.4 Safety measures for environmental protection

- ▶ Comply with the regulations on waste prevention and proper waste recycling or disposal during all work.

2.5 Special hazard warnings/residual hazards

2.5.1 Symbols used on the LED workstation lamp

Symbol	Description	Location
	Warning of electrical voltage This symbol warns of hazards caused by electrical voltage.	Quick guide, instructions for use
	Warning of ESD-sensitive components Warning about components that can be damaged by electrostatic discharge.	Quick guide, instructions for use
	Warning of hot surfaces This symbol warns of the risk of burns from hot surfaces.	Quick guide, instructions for use
Mandatory sign		
	Observe the operating and installation instructions This symbol indicates that the operating and installation instructions must be observed.	Quick guide, instructions for use
Other symbols		
	Disposal information This symbol indicates that the marked product must not be disposed of with household waste.	Type plate
	CE marking CE marking: Product complies with essential EU requirements.	Type plate
	Limited surface temperature For luminaires with this marking, the surface temperature of all surfaces of the luminaire that are exposed to dust accumulation must not exceed 90°C.	Type plate
	UL approval (versions with M12 connectors) Product meets essential UL requirements as a component used in a finished product.	Type plate
	Electrical safety class which ensures protection through ** safety extra-low voltage** (SELV), whereby the supply voltage is a maximum of 50 V AC or 120 V DC.	Nameplate



- Keep all safety and hazard warnings on the LED workplace lamp in a legible condition. Renew the warnings if necessary.

2.5.2 Hazards due to electrical energy

DANGER

Touching live parts poses a risk of electric shock!

Failure to observe this warning may result in death or serious injury!



- Always keep electrical components closed.
- Only allow work on electrical equipment to be carried out by a qualified electrician who is specially trained to work on electrical equipment and can recognize and avoid hazards.
- Switch off the power supply to all poles before starting work and check that there is no voltage.
- Installation in accordance with DIN VDE100-100 "Operation of electrical installations"
- Apply the five safety rules:
 1. Disconnect.
 2. Secure against reconnection.
 3. Check that there is no voltage.
 4. Ground and short-circuit.
 5. Cover or fence off live parts.

DANGER



In the event of an electric shock, there is a risk of secondary accidents due to shock (e.g., falling)!

Failure to comply may result in death or serious injury!

- Apply the five safety rules when working on electrical equipment.
- Only allow work on electrical equipment to be carried out by a qualified electrician.
- Before working on electrical equipment, disconnect the LED workplace lamp from the power supply and secure it against being switched back on.
- Only allow work on electrical equipment to be carried out by a qualified electrician, e.g., a company electrician.
- Check the electrical equipment regularly for defects such as loose connections or burnt cables. Have any defects repaired immediately.
- Have electrical equipment and stationary electrical equipment checked by a qualified electrician at least every 4 years. Stationary electrical equipment is equipment that is permanently installed or equipment that does not have a carrying device and is so large that it cannot be easily moved. This also includes electrical equipment that is temporarily installed and operated via movable connection cables.

- ▶ Have portable electrical equipment, connection cables with plugs, and extension and connection cables with their plugs checked by a qualified electrician at least every 6 months, if they are used. Equipment is considered portable if it can be moved while live according to its type and normal use.
- ▶ Any changes made to electrical equipment after inspection must comply with the currently valid standards and guidelines.
- ▶ Always keep all enclosures containing electrical equipment closed.
- ▶ Repair or replace damaged enclosures and cables immediately.
- ▶ If leakage currents exceed 10 mA, additional measures must be taken (grounding).

2.5.3 Warning against incorrect power supply

WARNING



There is a risk of short circuit or overload!

Failure to observe this warning may result in damage to the device or fire!

- ▶ Only use voltage ranges and power ratings in accordance with the device specifications.
- ▶ Provide a suitable backup fuse or current monitoring device.

2.5.4 Warning about unsuitable power supply

WARNING



Non-compliant power supplies pose a hazard!

Failure to comply may result in overload or fire hazard!

- ▶ Only use Class 2 power supplies for use in North America (USA/Canada).

2.5.5 Warning about inadequate protection class

WARNING

There is a risk of danger due to insufficient protection against dust or moisture!

Failure to observe this warning may result in failure!

- ▶ Observe the operating limits and the specified protection class.

2.5.6 Danger due to insufficient insulation requirements

DANGER



There is a risk due to insufficient insulation and contact hazard!

Failure to observe this may result in electric shock!

- ▶ Follow the description for connection assignment and the disconnection process.

2.5.7 Danger due to incorrect application

DANGER

There is a risk when used in hazardous areas without approval!

Failure to comply may result in a risk of explosion!

- ▶ Do not use the LED workstation lamp in areas where there is a risk of explosion.

2.5.8 Warning against false assumptions regarding safety

WARNING

There is a danger of false security!

Failure to comply may result in danger!

- ▶ Do not use the LED workstation lamp as a safety-related shut-off component.

2.5.9 Warning about falling parts during installation

WARNING



Improper mounting poses a hazard!

Failure to observe this warning may result in head, hand, or foot injuries!

- ▶ Only fasten the LED workstation lamp using suitable means and tighten the screws to the specified torque.
- ▶ Always wear the personal protective equipment required for the respective task (protective clothing, protective gloves, protective helmet, and safety shoes) while working.
- ▶ Use fasteners in accordance with the manufacturer's instructions and tighten them to the specified torque.

2.5.10 Caution in case of thermal hazard

CAUTION



There is a risk of burns from surfaces heated to over 50 °C!

Failure to observe this warning may result in burns!

- ▶ Observe the permissible ambient temperature and ensure adequate ventilation.
- ▶ Always wear suitable protective clothing and gloves when working near hot components. Components that can become hot are marked with the graphic symbol "Warning of hot surface."
- ▶ Allow components to cool to ambient temperature before performing maintenance or repair work.

2.5.11 Caution with optical radiation

CAUTION

There is a risk of glare from LEDs!

Failure to observe this warning may result in visual impairment!

- ▶ Do not stare at the LED surface due to possible glare.

2.5.12 Dangers from tripping

CAUTION

**Risk of tripping due to improperly laid power supply cables!**

Failure to comply may result in injury!

- ▶ Always lay cables in the supply shaft in such a way that they do not cause tripping hazards and are barrier-free.
- ▶ Mark unavoidable tripping hazards with color.

2.5.13 Dangers due to the use of incorrect spare parts

WARNING

Danger due to the use of incorrect spare parts!

Incorrect or faulty spare parts can lead to damage, malfunctions, or total failure, and can compromise safety!

- ▶ Only use original spare parts.
- ▶ Only purchase original spare parts.

2.5.14 Dangers of insufficient qualification

WARNING

**Risk of injury if you are not sufficiently qualified!**

Improper handling of the LED workstation lamp can result in serious personal injury and property damage!

- ▶ Only allow qualified personnel to carry out any work.

2.5.15 Dangers posed by cleaning fluids

WARNING



The LED workstation lamp poses hazards due to cleaning fluids !

Failure to observe this warning may result in serious injury!

- ▶ When handling the product, observe the safety regulations applicable to cleaning fluids.
- ▶ Always wear the protective equipment required for the respective task (respiratory protection, protective clothing, safety goggles, and protective gloves) while working.

2.5.16 Note on environmental influences

NOTE

Dust or moisture may cause a hazard!

Failure to observe this may result in malfunctions!

- ▶ Only operate the LED workstation lamp within the specified limits and follow the cleaning instructions.

2.5.17 Note on ESD hazard

NOTE



There is a risk of component damage due to electrostatic discharge!

Failure to comply may result in loss of function!

- ▶ Observe the ESD regulations.

2.5.18 Note on EMC hazard

NOTE

There is a risk due to insufficient interference emission or interference immunity!

Failure to observe this may result in malfunctions!

- ▶ Follow the EMC installation instructions and separate signal lines from sources of interference.

2.5.19 Note on mechanical stress

NOTE

There is a risk due to vibration or shock!

Failure to comply may result in loosening or failure!

- ▶ Perform regular inspection intervals for the fastenings.

2.5.20 Note on chemical exposure and cleaning

NOTE

Improper cleaning poses a hazard!

Failure to comply may result in damage to materials and equipment!

- ▶ Only use approved cleaning agents. Clean the exterior only with a mild soap solution without using solvents or acids.
- ▶ Do not use sharp-edged tools for cleaning, especially to avoid scratching the optical diffuser.
- ▶ Do not clean with high pressure.

2.5.21 Note on installation errors

NOTE

There is a risk of danger due to incorrect hole pattern or incorrect torque!

Failure to observe this may result in fastening failure!





- ▶ Install the LED workstation light in accordance with chapter 5 Installation

2.6 Personal protective equipment

When operating the LED workplace light, personal protective equipment must be worn regardless of the risk assessment for the area of application in order to minimize health hazards. Personal protective equipment must be designed specifically for the relevant risk.

- ▶ Always wear the protective equipment required for the task at hand when working.
- ▶ Do not wear rings, chains, or other jewelry during transport, assembly, disassembly, and maintenance work.
- ▶ Follow all instructions regarding personal protective equipment.

The symbols have the following meanings:

Symbol	Description
	Safety shoes Wear non-slip safety shoes to protect yourself from heavy falling objects or slipping on slippery surfaces.
	Work safety clothing Protective work clothing is close-fitting work clothing with low tear resistance, tight sleeves, and no protruding parts. It is primarily used to protect against being caught by moving parts.
	Protective gloves Wear protective gloves to protect your hands from friction, abrasions, punctures, or deeper injuries, as well as from contact with hot surfaces or chemical substances.
	Safety helmet Wear a protective helmet to protect yourself from falling or flying parts.

Personal protective equipment must be provided by the operator and must comply with the applicable requirements.

In addition, national regulations and specifications from the application area risk assessment and, if applicable, internal instructions from the operator must be observed.

2.7 Information for emergencies

Preventive measures:

- ▶ Always be prepared for accidents or fire.
- ▶ Keep first aid equipment (first aid kit, blankets, etc.) and fire extinguishers within easy reach.
- ▶ Familiarize personnel with accident reporting, first aid, fire extinguishing, and rescue equipment.
- ▶ Keep access routes clear for emergency vehicles.

Measures in the event of accidents:

- ▶ Disconnect the power supply to the LED workstation light.
- ▶ Rescue people from the danger zone.
- ▶ In the event of cardiac and/or respiratory arrest, initiate resuscitation immediately.
- ▶ In the event of personal injury, notify the first aid officer and an emergency doctor or the emergency services.
- ▶ Clear the access routes for emergency vehicles. If necessary, assign someone to direct the emergency services.
- ▶ Extinguish any fire in the electrical control system with a CO2 extinguisher.

2.8 Operator's obligations

The LED workplace light is used in commercial settings and the operator must comply with the statutory occupational safety regulations. In addition to the safety instructions in the operating manual, the applicable safety regulations for the area of use must be observed.

The operator must ensure that the LED workplace light is used properly, that the operating instructions are available on site, and that clear responsibilities for installation, operation, maintenance, and cleaning are defined. Only qualified and trained personnel above the legal minimum age may carry out work on the LED workplace light. Regular training, information about hazards, and the provision and use of personal protective equipment are required. The operator must ensure that persons working with the LED workstation light have read and understood the operating and installation instructions. In addition, adequate virus protection/firewall in the IT infrastructure and compliance with maintenance intervals are required. The operator must regularly check the technical condition of the device and ensure that the safety and warning notices are legible.

3 Description of the LED workstation lamp

3.1 Function description

3.1.1 General

The LED workstation light n AL-48-S and AL-48-D are electronically controlled LED workstation lights for a wide range of applications in machines, systems, or test equipment. It is designed as a permanently fixed assembly for industrial use and is operated directly with 24 V DC. The device has a robust, anodized system profile aluminum housing and a shatterproof, finely prismatic polycarbonate diffuser that ensures high glare control. It can be easily integrated into system profile systems using the appropriate profile system accessories. The AL-48-S version is equipped with an external switch. The AL-48-D version can be dimmed and switched on and off using the arrow keys.

3.1.2 Optical properties

- Lighting area: Full-surface, diffuse, finely prismatic illumination.
- Daylight color 5700K, light type: continuous light
- Groove profile system housing 80 mm x 40 mm
- LED lighting with high color fidelity and high contrast for good visibility in industrial environments.

3.1.3 Electrical connection

- Power supply: Operating voltage 21–27 V DC, Class II (for USA/Canada)
- Connection: M12 connector, A-coded

3.1.4 Safety features

- Protection class: IP 40, suitable for harsh industrial environments.
- Protection class: III (operation with safety extra-low voltage).
- Limited surface temperature DIN EN 60598-2-24:2014-04: The temperature does not exceed 90°C on any surface of the luminaire that is exposed to dust accumulation.
- Electrical safety: Operation in North America (USA/Canada) permitted exclusively with Class II power supply.
- Shock and vibration resistant: Insensitive to mechanical influences.

- Compliance with standards: Meets the requirements of Directive 2014/30/EU (EMC) and Directive 2011/65/EU (RoHS) including extension 2015/863/EU.

3.1.5 Typical areas of application



- Lighting for workstations in and around machines and systems.
- Lighting in conveyor technology, packaging systems, and testing facilities.

3.2 Technical data


Technical data AL-48-S/D	
Electrical	
Supply voltage	24 V DC (21 - 27 V DC)
Nominal current consumption	1.7 A
Electrical remote control (AL-48-S only)	OFF: EN <1V ON: EN > 8V
Protection class	
Permissible power supply	Class 2 for use in the USA/Canada)
Connection	<p>AL-48-S M12 connector A-coded</p>  <p>AL-48-D: Plug A-coded</p>  
Reverse polarity protection	Internal
Operating mode	Continuous

3 Description of the LED workstation lamp

3.2 Technical data

Technical data AL-48-S/D		
Mechanical		
Dimensions	AL-48-S / AL-48-D (L × W × H): 700 x 80 x 40 mm / 27.6'' x 3.1'' x 1.6''	
Weight	AL-48-S / AL-48-D: 1.5 kg	
Installation position	Any	
Mounting	Mounting with 2×T-slot nuts 8 (included)	
Optical diffuser	Polycarbonate, finely prismatic	
Housing material	Aluminum	
Protection and environmental conditions		
Protection class / NEMA	IP40 (suitable for damp locations) / Type 2	
Ambient temperature	-20 °C to +40 °C	
Storage temperature	-40 °C to +70 °C	
Permissible humidity	40 - 60% (non-condensing)	
Service life (L70)	60,000	
Meters above sea level	2000 m	
Earthquake class	No earthquake zone	
Chemical composition	Halogen-free, silicone-free, REACH/ROHS	
Optical data		
Luminous color	5700K	
Color rendering index	>90	
Energy efficiency class	F	
Luminous flux	4250 lm	
Ecodesign Regulation 2019/2020 EU		
	AL-48-S EPREL Reg.-Nr.: 2073985	AL-48-D EPREL Reg.-Nr.: 2073986

3.2.1 Dimensions

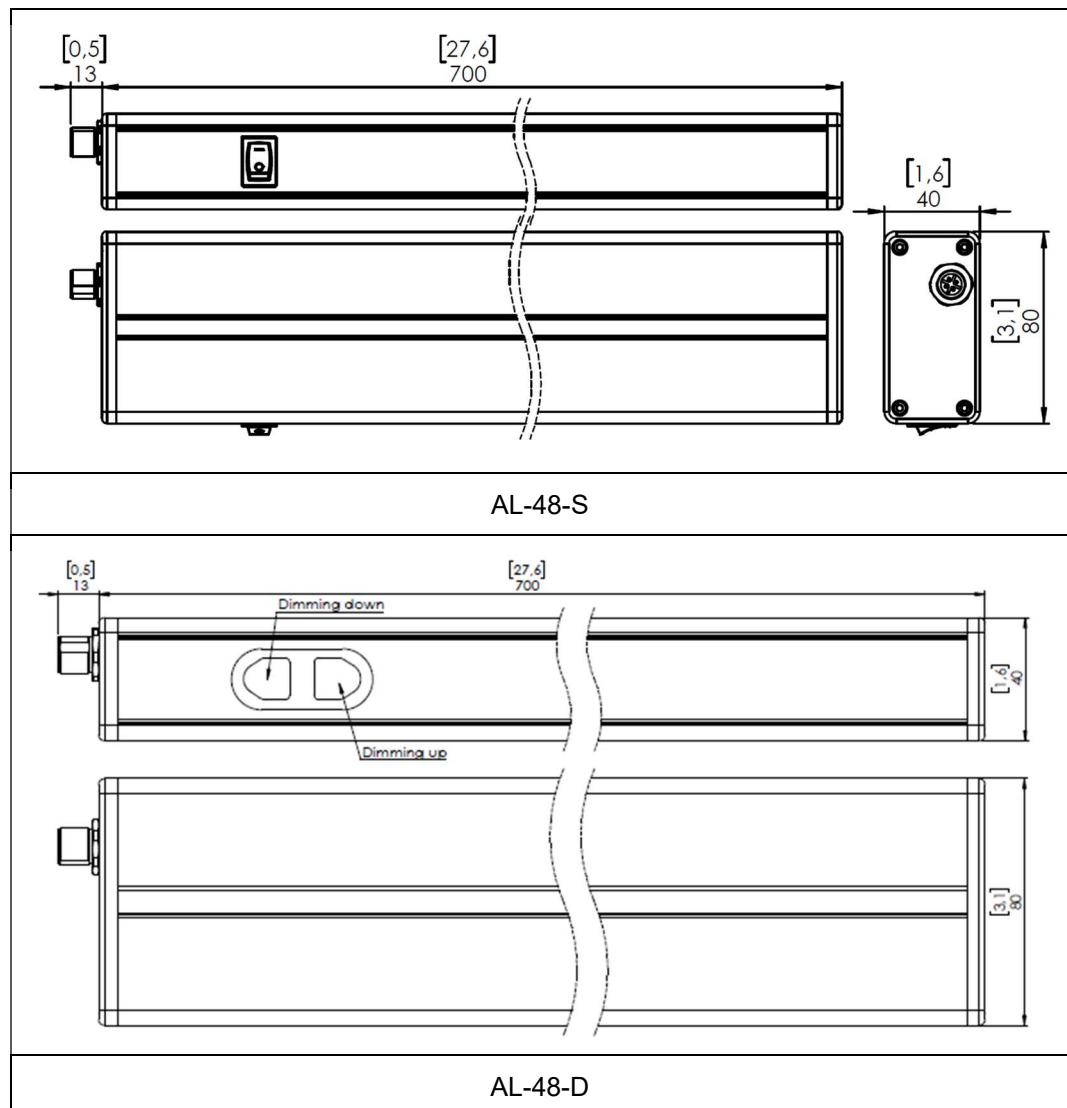

1 : Dimensions

4 Transport and storage

4.1 Delivery by an authorized transport company

The LED workstation lamp is delivered to the customer by a transport company authorized by Schrempp electronic GmbH .

4.2 Inspection upon receipt by the recipient

Upon arrival of the LED workstation lamp at the customer's premises, it must be inspected for visible transport damage.

- Report any transport damage immediately to the delivery company.

4.3 Packaging

The mode of transport is a decisive factor in determining the type of packaging. Unless otherwise agreed in the contract, the packaging complies with the HPE packaging guidelines, which were established by the Federal Association of Wood Products, Pallets, and Export Packaging (Bundesverband Holzmittel, Paletten, Exportverpackung e. V.) and the Association of German Engineering Companies (Verein Deutscher Maschinenbauanstalten).

- Please observe the pictograms on the packaging.

4.3.1 Unpacking

When unpacking the LED workstation lamp , proceed as follows:

- Remove the packaging. Dispose of packaging materials such as plastic film and adhesive tape in the appropriate manner.
- Always remove all packaging before installing the LED workstation lamp .
- Keep the original packaging for return/further transport.
- Check the delivery against your order to ensure it is complete.
- Be sure to keep the documents supplied, as they contain important information on how to use the LED workstation lamp .
- Check the packaging contents for visible transport damage.
- If you discover any transport damage or discrepancies between the contents of the package and your order, please inform Schrempp electronic GmbH at .

4.3.2 Repackaging

See chapter "4.3.1 Unpacking".

4.4 Information on hazards during transport

WARNING



The following specific hazards may occur when transporting the LED workstation lamp:

Suspended loads may fall, posing a risk of death!

Protruding edges can cause crushing or cutting injuries!

- ▶ Only use approved load-bearing devices.
- ▶ Always wear the personal protective equipment required for the respective task (protective clothing, protective gloves, protective helmet, and safety shoes) while working.
- ▶ Ensure that you and other people do not stand under suspended loads.
- ▶ Do not use cables or attachments as anchor points.

4.5 Scope of delivery

The scope of delivery of the LED workstation lamp consists of the following components:

- AL-48-S or AL-48-D LED workstation light
- 2x T-slot nut size 8, M6 thread
- Quick guide

4.6 Temporary storage

If the LED workstation light is not installed immediately after delivery, it must be stored carefully in a protected place. The LED workstation light must be stored in such a way that it is protected from cold, moisture, dirt, chemical and mechanical influences. The recommended storage conditions for the LED workstation light can be found in the chapter "Environmental conditions".



We accept no liability for damage resulting from improper storage!

5 Installation

The LED workstation light is designed for permanent, stationary installation in industrial environments. It is installed on the front of a suitable mounting surface and must be positioned so that the signals are clearly visible to operating and maintenance personnel.

Check the LED workstation light for damage before installation. If there is visible damage, the LED workstation light must not be installed and the manufacturer must be contacted.

5.1 Pre-assembly by Schrempp electronic GmbH

The LED workstation light is completely pre-assembled by Schrempp electronic GmbH . Connection to the machine/system is carried out by the machine/system supplier.

5.2 Information on hazards during installation

WARNING



Improper mounting poses a hazard!

Failure to observe this warning may result in head, hand, or foot injuries!

- ▶ Only fasten the LED workstation light using suitable means and tighten the screws to the specified torque.
- ▶ Exceeding the permissible environmental conditions (temperature, humidity, vibration load) can lead to failure. Check the installation location in advance.
- ▶ Always wear the personal protective equipment required for the respective work (protective clothing, protective gloves, protective helmet, and safety shoes) while working.
- ▶ Use fasteners in accordance with the manufacturer's instructions and tighten them to the specified torque.
- ▶ Do not use the LED workstation light as a climbing aid. Misuse may cause the LED workstation light to break off or be damaged in other ways.
- ▶ Install the LED workstation light so that it cannot be used as a climbing aid.

⚠ CAUTION**Risk of tripping due to improperly laid power supply cables!**

Failure to comply may result in injury!

- ▶ Always lay cables in such a way that they do not cause a tripping hazard and are barrier-free.
- ▶ Mark unavoidable tripping hazards with color.

⚠ CAUTION**Risk of injury due to unsuitable mounting material!**

Unsuitable mounting materials can result in injury during operation!

- ▶ If necessary, use only the mounting material supplied.
- ▶ M6 screws used should be screwed into the T-slot nuts with a thread depth of at least 8 mm.

5.3 Preparatory measures

5.3.1 General

Before installing the LED workstation light , ensure that:

- additional lighting equipment (e.g., hand lamps) is available for installation (if necessary),
- the installation surface at the installation site is clean and free of dust,
- the necessary tools for installation are available:
 - Hex key for M6
 - Torque wrench (adjustable)
 - Screwdriver for electrical connections (qualified personnel only)

5.3.2 Preparatory measures for electrical installation

Before installing the LED workstation light , ensure that:

- The connections for the power supply are prepared.
- The work area is secured and no voltage is present.
- The mounting position has been determined (clear view, protection against damage).
- The mounting holes, M6 mounting screws of suitable length (Chapter 5.2) and T-slot nuts for M6 screws are prepared.

5.4 LED workstation light mounting

WARNING

Risk of injury due to instability!

There is a risk of serious injury due to instability of the individual assemblies when mounting the LED workstation lamp as a result of incorrect assembly!

- ▶ Please note that the installation surface must be:
 - flat and level
 - has the necessary load-bearing capacity,
 - is temperature-resistant, non-flammable, and
 - vibration-free
 - The surface temperature of the luminaire must not exceed 90°C
- ▶ Only allow authorized and trained personnel to carry out the installation work.
- ▶ Observe the tightening torques for all screw connections during installation.
- ▶ Ensure that the M6 screws are of a suitable length (Section 5.2).
- ▶ Always wear the protective equipment required for the respective work (e.g., protective clothing and safety shoes) while working.
- ▶ Avoid locations for the LED workstation light that are close to impermissible electromagnetic fields.
- ▶ Do not install the LED workstation light in locations where there is a corrosive or explosive atmosphere.
- ▶ Please note that the LED work light is only intended for indoor use.
- ▶ Do not use the LED workstation light in EX areas.
- ▶ Observe the environmental conditions.
- ▶ Please note that the LED workstation light must be protected against the risk of accidental impact.
- ▶ Please note that with regard to order and cleanliness, care must be taken to ensure that: all wires and cables are neatly laid and covered if necessary, tools in the vicinity of the LED workstation lamp are tidied away, and any parts lying around and waste (if any) are removed regularly.



5.4.1 Mechanical fastening

Proceed as follows during installation:

- ▶ Align the LED workstation light in the intended position.
- ▶ Insert the supplied M6 slot nuts into the designated profile slots on the light housing.
- ▶ Secure the light with 2x M6 screws of a suitable length in accordance with section 5.2. (Tightening torque: 5–6 Nm, unless otherwise specified by the manufacturer).
- ▶ Check that the luminaire is securely fastened (no play, no twisting). Do not install luminaires closer than 15.25 cm to curtains or similar combustible materials.

5.4.2 Electrical connection

- ▶ Plug in and lock the connection completely.
- ▶ Check the assignment according to the technical documentation.
- ▶ Only use a Class 2 power supply in North America.

5.4.3 Installation instructions

- ▶ Ensure direct visibility in the intended observation area.
- ▶ Avoid installation locations with strong external lighting or direct sunlight.
- ▶ Protect the light from mechanical impact, vibration, and chemical influences.

6 Commissioning

6.1 Safety measures before commissioning

WARNING



Risk of injury during commissioning!

There are various risks of injury during commissioning.


- ▶ Only allow qualified personnel to perform commissioning.
 - ▶ Cordon off the danger area and keep unauthorized persons away.
 - ▶ Lay power supply cables so that they do not cause a tripping hazard and are barrier-free (e.g., under covers).
-
- ▶ Familiarize yourself sufficiently with:
 - the features of the LED workstation light ,
 - the operation of the LED workstation light ,
 - emergency measures.
 - ▶ Before initial use, carry out the following activities:
 - ▶ Check the LED workstation light for visible damage; repair any defects immediately – the LED workstation light may only be operated if it is in perfect condition.

6.2 Connection AL-48-S/ AL-48-D

AL-48-S/D

PIN 1:	+24 VDC
PIN 4:	EN (AL-48-S only)
PIN 2:	Not assigned
PIN 3	GND

M12 plug:

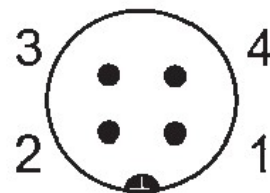

6.3 Integrated dimming (AL-48-D only)

- ▶ The luminaire is switched on with approx. 85% of its maximum luminous intensity as the default setting.
- ▶ You can use the arrow keys to dim the light in 8 steps from approx. 10% to 100%.
- ▶ Pressing both arrow keys simultaneously switches the light on or off.

7 Troubleshooting

⚠ WARNING



There are hazards associated with troubleshooting the LED workstation light !

Failure to observe these instructions may result in damage, malfunction, or total failure of the LED workstation light , as well as compromising the safety of the LED workstation light !

- ▶ Only qualified personnel should carry out troubleshooting.

7.1 Remedial measures

Fault	Cause	Remedy
LED workstation lamp not functioning	No power supply	Check power supply and switch on
	Plug not connected correctly	Check and lock plug connections
	Defective power supply	Replace power supply according to specifications
LED workstation light does not illuminate	Error in the control system or wiring	Check the control program for enable contact "EN" and wiring and correct if necessary
LED workstation light flashes or flickers unintentionally	Voltage fluctuations	Stabilize the power supply
	Loose connection in the supply cable or connector	Check connectors and cables
Light surface unevenly bright	Defective LEDs	Replace device

8 Maintenance and cleaning

8.1 Safety measures during maintenance work

8.1.1 General safety measures during maintenance work

Perform the prescribed maintenance work, such as cleaning and inspections, in a timely manner. Read the chapter "2 Safety ".

- ▶ Block access to the area where the LED workstation light is in use. Ensure that only authorized persons are in the area where the LED workstation light is in use.
- ▶ Replace any defective LED workstation lights and accessories immediately.
- ▶ Only use original accessories and spare parts. The use of other parts will void the warranty and suitability and may result in injury.

After completing maintenance work and before using the LED workstation light , perform the following tasks:

- ▶ Check all previously loosened screw connections again to ensure they are tight.
- ▶ Check that all previously removed protective devices, covers, housing covers and, if applicable, other components are properly reinstalled.
- ▶ Ensure that all tools, materials, and other equipment used have been removed from the work area.
- ▶ Clean the work area.



Modifications, alterations, incorrect and improper use, and failure to observe the instructions in this operating manual will void the warranty.

8.2 Inspection and maintenance work

8.2.1 Maintenance intervals

Maintenance point	Maintenance work	See section
Monthly		
Entire LED workstation lamp	Visual inspection for damage, secure fit, and contamination.	8.2.3
Entire LED workstation lamp	Functional inspection	
Annually		
e LED workstation light	Check electrical connections, mounting screws, and seals.	8.2.44

8.2.2 Preparatory measures for the electrical system



⚠ DANGER

Danger of death from electric shock!

Live components can cause fatal electric shock or serious injury if touched!

- ▶ Only allow work on electrical equipment to be carried out by a qualified electrician who is specially trained to work on electrical equipment and can recognize and avoid hazards.
- ▶ Before performing maintenance and inspection work on the LED workstation light, disconnect the LED workstation light from the power supply.
- ▶ Secure the LED workstation light against unexpected restarting by locking the main switch with a lock.
- ▶ Attach a warning sign to the main switch to prevent it from being switched back on.

NOTE



- ▶ Use ESD protection measures (e.g., grounding wrist strap, conductive workstation mat) during maintenance.

8.2.3 Maintenance - monthly

8.2.3.1 Visual inspection

- ▶ Check the light surface for scratches, cracks, or cloudiness.
- ▶ Check that the luminaire is securely fixed (no play, no twisting).
- ▶ Check cables and plug connections for damage, corrosion, or loose connections.

8.2.3.2 Cleaning

- ▶ Use a soft, lint-free cloth.
- ▶ Clean the light surface with a mild, non-abrasive cleaning agent.
- ▶ Avoid aggressive solvents (e.g., acetone, gasoline, concentrated acids, chloroform) that can damage the diffuser.
- ▶ Ensure that no moisture penetrates the housing.

8.2.3.3 Function test

- ▶ Restore the power supply.
- ▶ Activate all lighting functions one after the other.
- ▶ Check that colors are displayed correctly.
- ▶ Document any abnormalities in the maintenance log.

8.2.4 Maintenance - annually

8.2.4.1 Electrical Check

! DANGER



Danger of death from electric shock!

Live components can cause fatal electric shock or serious injury if touched!

- ▶ Only allow a qualified electrician to carry out work on electrical equipment.
- ▶ Before performing any maintenance or inspection work, disconnect the LED workplace lamp from the power supply.

- ▶ Check all connectors to ensure they are securely fastened and locked.
- ▶ Check the cables for chafing or crushing.

- ▶ If necessary, tighten the terminal fastening screws (torque according to manufacturer's specifications).

8.2.5 Replacement of components

- ▶ Not possible. Only replace the entire device.

9 Decommissioning and dismantling

WARNING




Risk of serious injury due to improper decommissioning or disposal of the LED workstation light!

Failure to comply may result in serious injury!

- ▶ Have all work on the electrical system carried out by qualified electricians only. Qualified electricians are specially trained to work on electrical systems, are aware of the dangers of electrical voltage, and can independently avoid potential hazards by taking the correct action.
- ▶ Only allow qualified or appropriately trained specialists who are experienced in dismantling electrical equipment to dismantle the LED workstation light.
- ▶ Switch off the LED workstation lamp completely before starting any dismantling work and disconnect it from the power supply at all poles.
- ▶ Always wear the necessary personal protective equipment during work, e.g., protective work clothing, safety shoes, protective gloves, and a protective helmet.
- ▶ If in doubt, contact Schrempp electronic GmbH for technical support or advice on safe decommissioning and disposal.

9.1 Disposal

WARNING

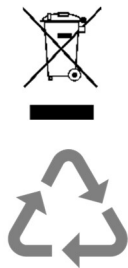

Risk of environmental pollution/waste of resources!

Failure to comply may result in environmental damage!

- ▶ Only allow trained and authorized personnel to carry out disposal work.
- ▶ Separate electrical and electronic components in accordance with Directive 2012/19/EU. Separate materials and packaging waste by type and send them for recycling. Recycle materials marked with a recycling symbol. The packaging is made of various materials that can be disposed of at your local recycling facility. By disposing of the packaging properly, you help to avoid potential hazards to the environment and public health.
- ▶ Observe local recycling regulations.

10 Appendix

10.1 EU Declaration of Conformity

On the following pages, you will find the EU Declaration of Conformity for this LED workstation lamp and the attached documents.



EU Declaration of Conformity

(Original Declaration of Conformity)

Manufacturer/authorized representative:	Schrempp electronic GmbH , Wiesenstrasse 5 , D-65843 Sulzbach/Ts.
Authorized representative for compiling the technical documentation:	Schrempp electronic GmbH , Wiesenstrasse 5 , D-65843 Sulzbach/Ts.
Product:	AL-48-S: 10823 / GTIN 4262388141478 AL-48-D: 10824 / GTIN 4262388141485
Function:	The workstation lamp is intended exclusively for illuminating industrial machines, devices, or systems.

The manufacturer bears sole responsibility for issuing this declaration of conformity. The object of the declaration described above complies with the relevant Union harmonization legislation, depending on the components used, as described in the annexes to the directives, which form an integral part of this declaration of conformity:

- 2014/30/EU - EMC Directive, including the essential requirements of Annex I
- 2011/65/EU + (EU) 2015/863 - RoHS EU Directive, including the essential requirements of Annex II

These products comply with the current requirements of the RoHS Directive for all 10 designated materials (max. 0.1% by weight in homogeneous material for lead, mercury, hexavalent chromium (Cr6+), polybrominated biphenyl (PBB), polybrominated diphenyl ether (PBDE), diphthalate (DEHP), butyl benzyl phthalate (BBP), dibutyl phthalate (DBP) and diisobutyl phthalate (DIBP) and max. 0.01% by weight for cadmium).

Indication of the relevant harmonized standards (or parts thereof) that have been applied, including the date of the standard, or indication of other technical specifications for which conformity is declared, including the date of the specification:

- DIN EN 60598-1/A11: 2021
- DIN EN 60598-2-24:2014-04
- DIN EN 55015: +A11: 2020
- DIN EN 61547: 2023
- DIN EN 62471: 2009
- DIN EN 60529
- EN IEC 63000:2018

D-65843 Sulzbach/Ts. , 29.11.2025

Dipl.-Ing. Wolfram Schrempp, Managing Director